

Before you can use your PDL diagnostic tool (after initial purchase), software activation is required.


The free online ShopStream Connect™ PC based application is used to register and activate your software.

Instructions


1. From your PC, download the ShopStream Connect (SSC) application from:

<https://eu.sun-workshopsolutions.com/en>


2. Start the installation. If the installation does not automatically start, double-click the SSC installation file **ShopStreamConnect.exe**, that downloaded onto your PC.
3. To complete the installation, follow the screen prompts.

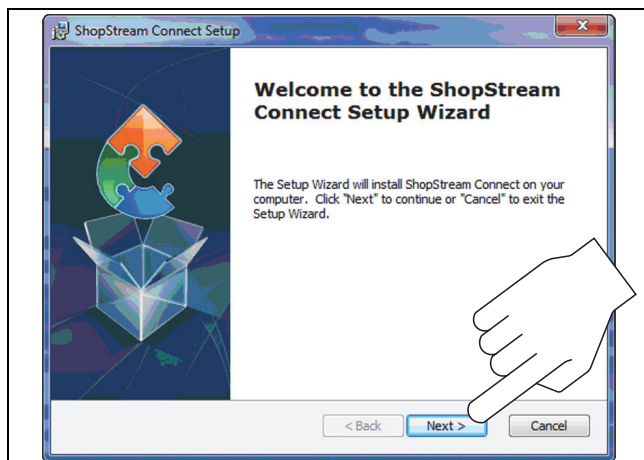


4. Once installed, open the application from the SSC icon created on the desktop.

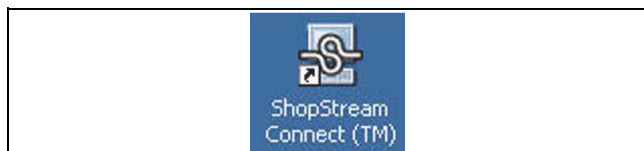

5. Connect the USB cable to the diagnostic tool and your PC.

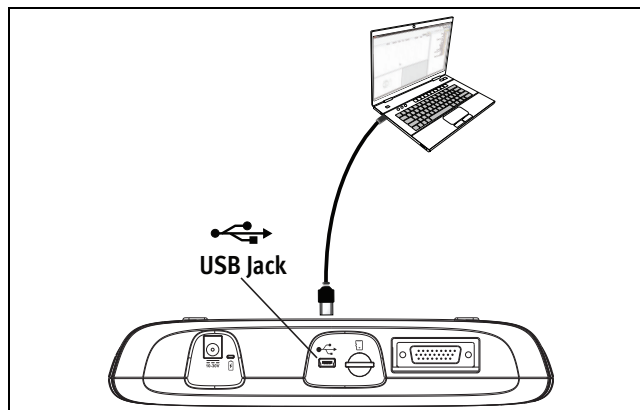


6. On the diagnostic tool Home screen select **Tools**.

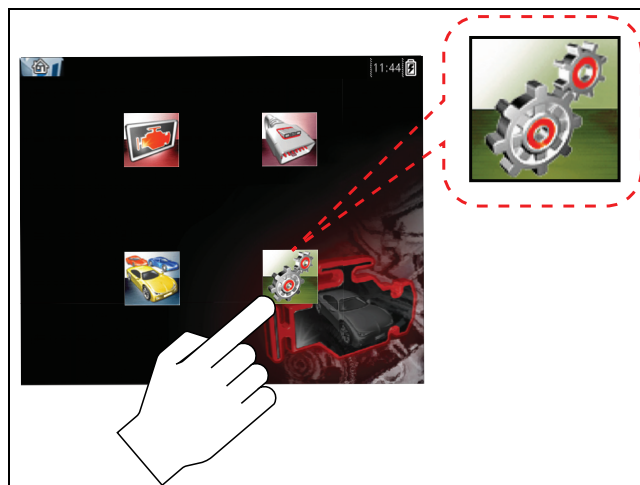


7. Select **Connect-to-PC**.




The diagnostic tool establishes communication with the SSC application.

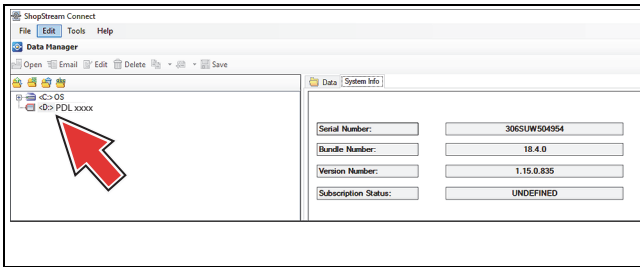


8. The SSC Update Manager "Activation" screen automatically displays. Select **Next** to start the process.

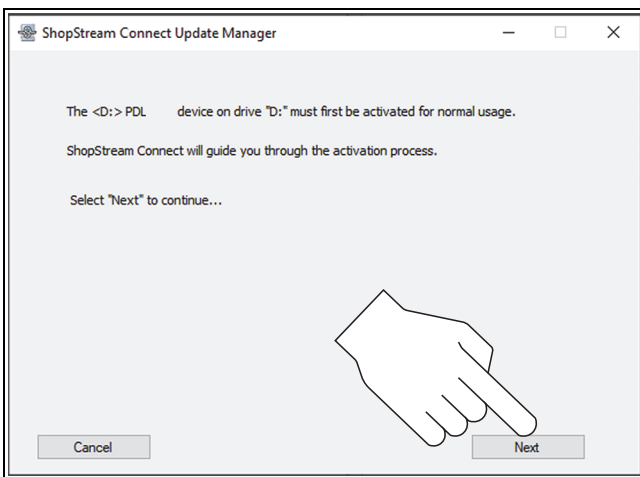


9. Agree to the software license agreement, then select **Next**.
10. Enter your shop information, then select **Next**.

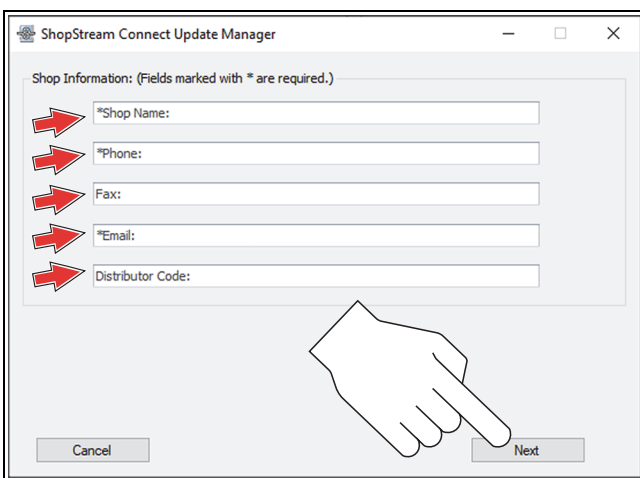


11. Enter your contact information, then select **Next**.

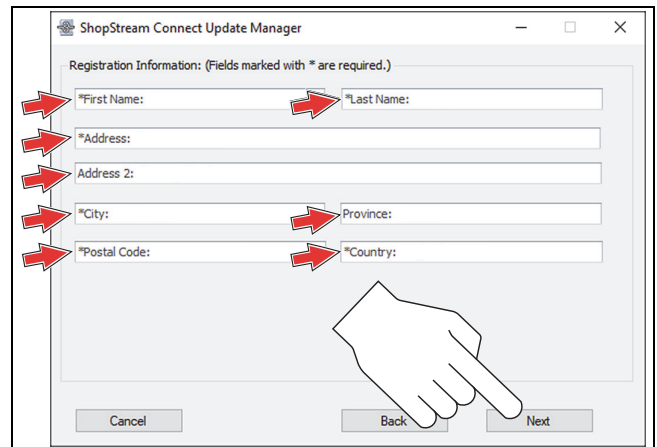

12. The "Activation" confirmation screen is displayed, select **Next** to confirm installation.

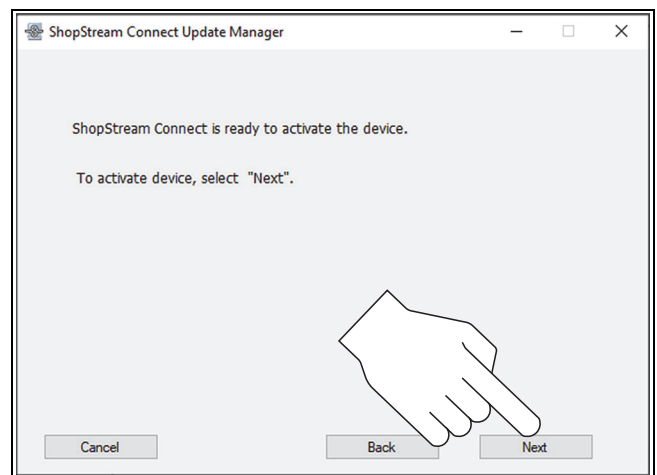

13. The "Activation Confirmed" screen is displayed, select **Finish** to complete the installation.

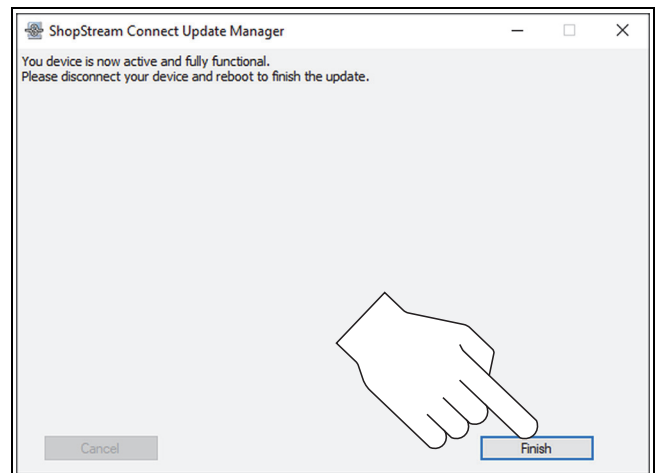

14. Disconnect the USB cable and reboot the diagnostic tool.

Your diagnostic tool is ready to use!